

Esprit - how to check the focuser worm diameter

Esprit - checking the focuser worm diameter

Step 1 - Take the 1:10 side of the focuser, and align the worm so you can see the little hex screw on the worm, inside the hole . Its a 2mm allen wrench needed, just loosen the screw, do not extract it.




Esprit - checking the focuser worm diameter

Step 2 - Next take the little hex screw in the housing near the focus knob, it fixes the 1:10 unit. Loosen it, do not extract.



Esprit - checking the focuser worm diameter

Step 3 - Now the whole 1:10 unit is loose and you can pull it off the focuser worm. It sits a little tight, but you should be able to wobble it out

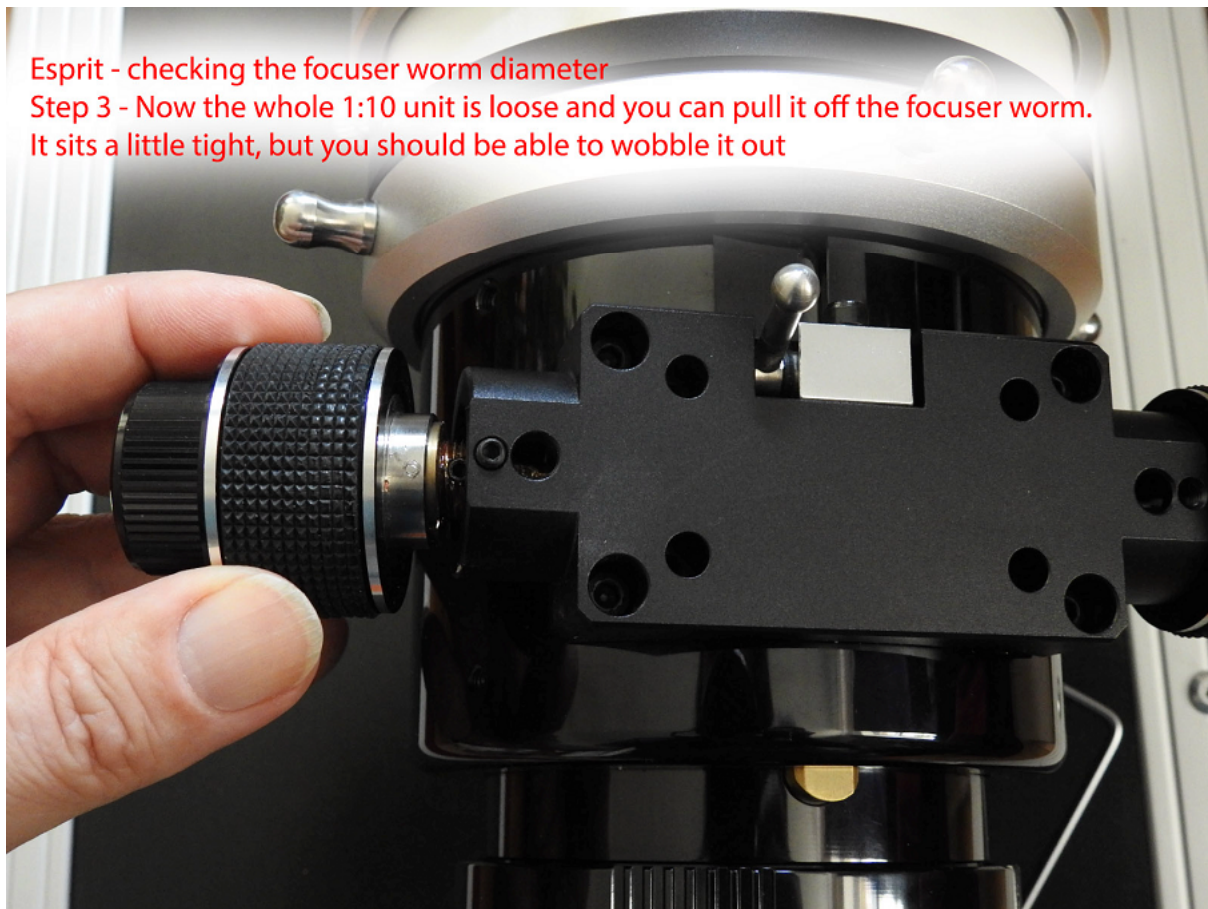

Esprit - checking the focuser worm diameter
Step 4 - Now you can see the worm in its housing,
and this is the diameter we need.
Here it is a 4mm worm.



Please measure the diameter using a gauge and order your MFLA motofocus with the according coupler.

After that reverse the procedure to attach your 1:10 unit again. It will be the same procedure when you attach your MFOC. It's easy!

your Lacerta team

www.lacerta-optics.com